

# Pro-Motion™ DC hand control

## OPERATION GUIDE

**HEAD UP BUTTON**  
Press and hold to raise the head section.

**HEAD/FOOT UP BUTTON**  
Press and hold to raise the head and foot sections simultaneously.

**FOOT UP BUTTON**  
Press and hold to raise the foot section.



**HEAD DOWN BUTTON**  
Press and hold to lower the head section.

**HEAD/FOOT DOWN BUTTON**  
Press and hold to lower the head and foot sections simultaneously.

**FOOT DOWN BUTTON**  
Press and hold to lower the foot section.

### IMPORTANT:

Read advisory information in the owners manual carefully before using this product. The potential for electrical shock exists if electrical components are not installed or operated properly.

